



CRUZE JH II AHU REMOVAL INSTRUCTIONS


1. Pull dash panel out slightly and remove top piece cloth panel.(This allows you to remove the vent easier without scratching.) Refer Figure 1 & 2.

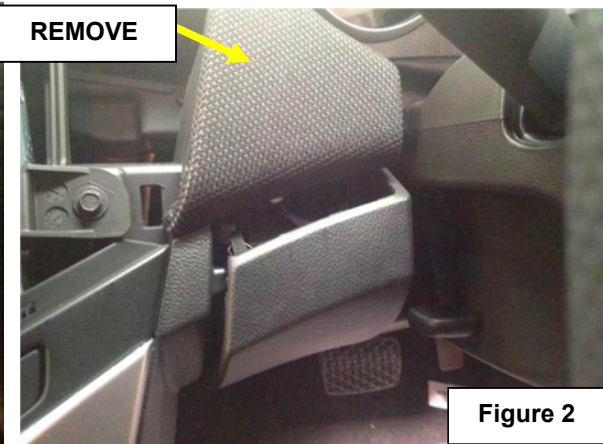


2. Using a panel removal tool or a similar tool remove the upper trim vent housing starting from where the cloth panel was removed and working your way around and remove vent housing.(Refer figure 3 and 4)

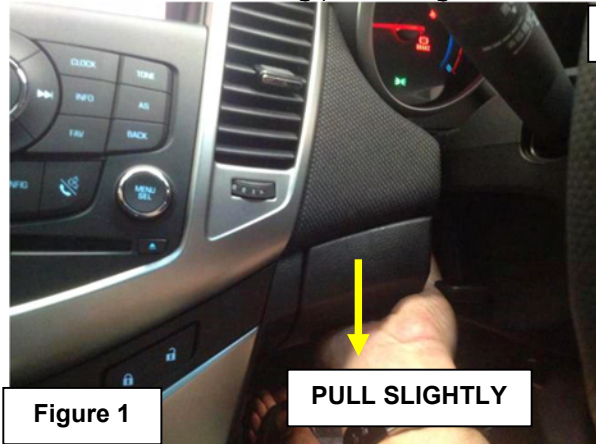

3. Now using your panel removal tool lift the shifter surround panel up starting at the point below. Once panel has been lifted you can pull the upper section of the panel towards the rear of the car to remove. Disconnect the 2 plugs and place in suitable location. Refer figure 5 & 6.

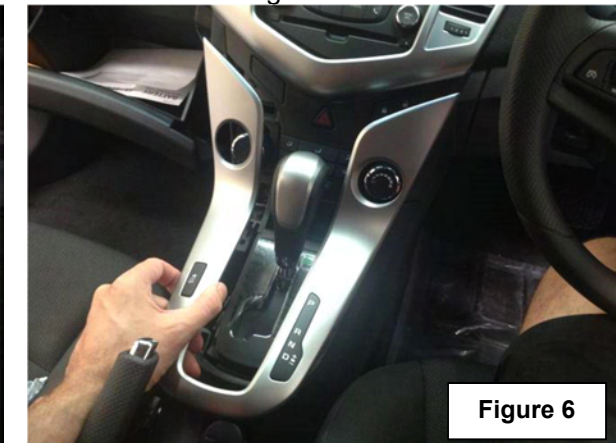

4. Remove the 8 x 9/32" bolts at the below points. After the bolts have been removed remove the storage pocket. Refer figure 7

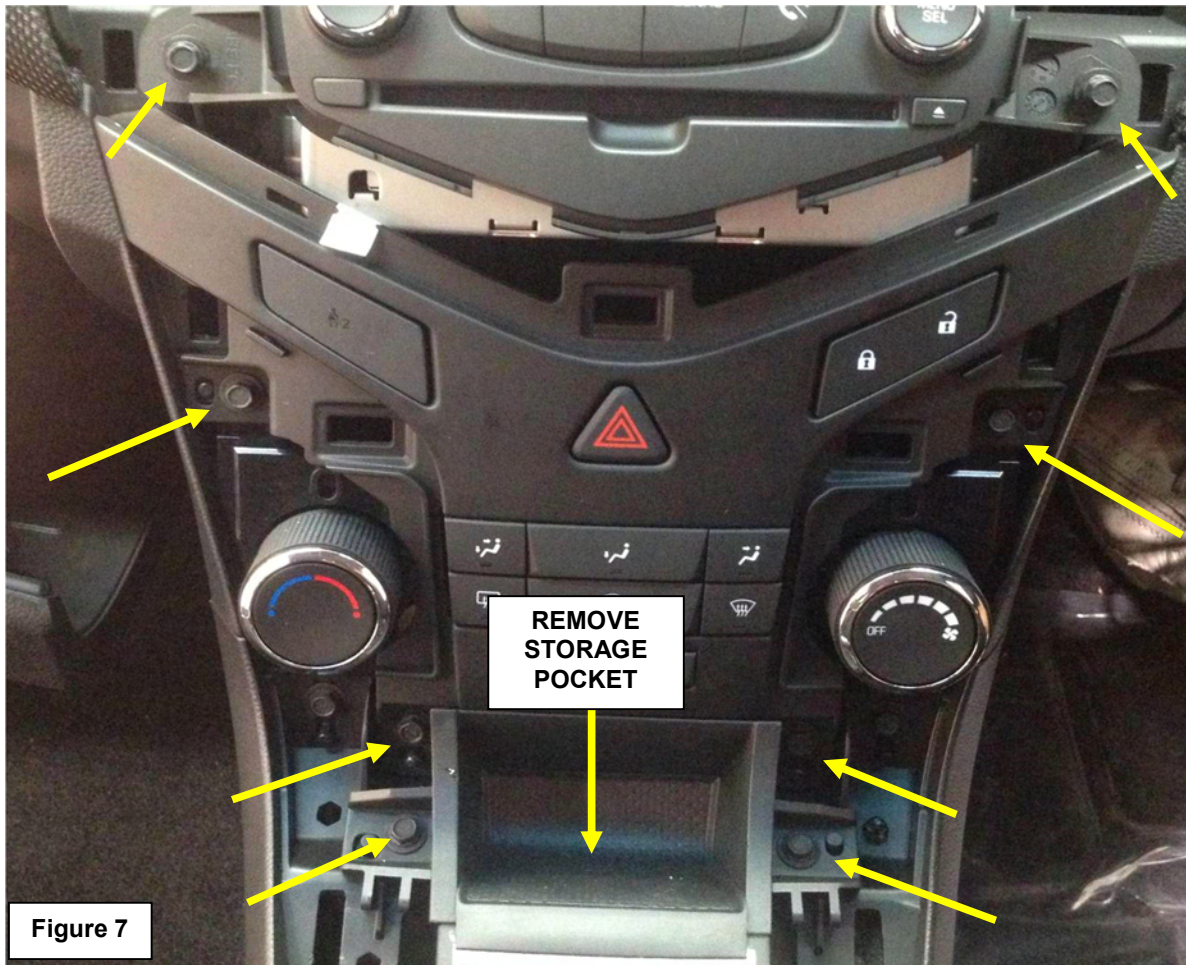

5. Pull out climate control panel at the following point. This panel can be very hard to remove. Be patient and the clip will remove. Repeat on the other side. The panel can be covered with a towel or suitable protective material and allowed to hang to the side. Refer figure 8.



6. Remove the radio control panel by grasping and pulling towards the rear of the vehicle, and remove the 1 connector. This connector has a small blue clip which needs to be disengaged before it can be unlocked. Refer figure 9 and 10.



Figure 9

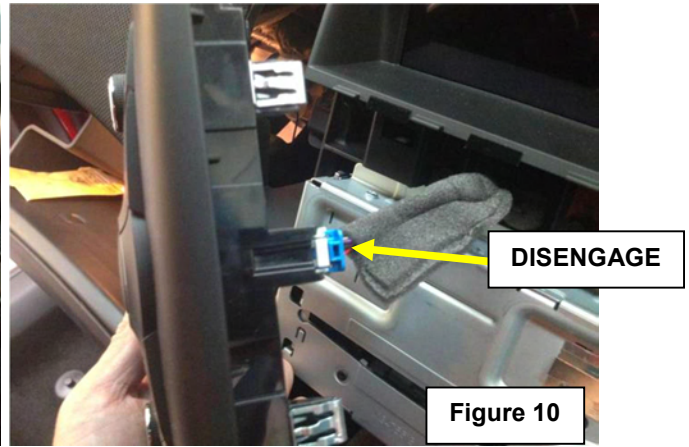


Figure 10

7. Remove 2 x 9/32" screws from above stereo which hold the display screen in place. Remove screen by pulling out and disconnect 2 plugs at rear of screen. Refer figure 11 & 12.

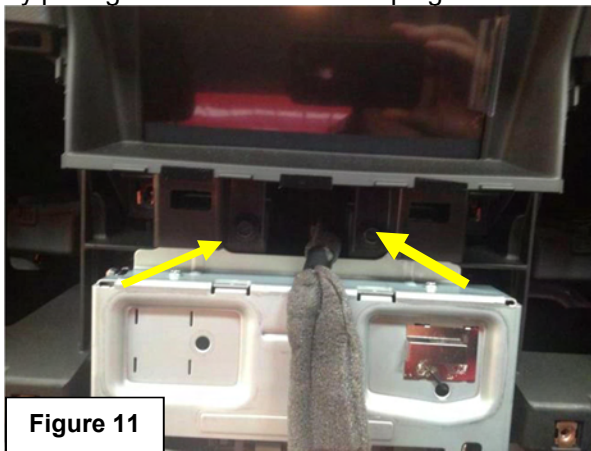


Figure 11

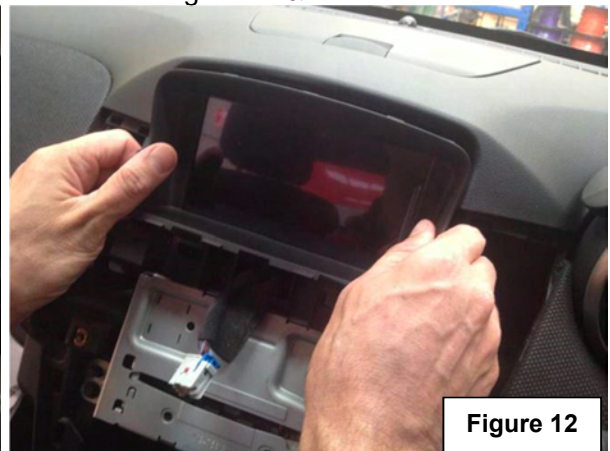


Figure 12

8. Remove the 4 screws from the stereo chassis (Refer figure 13) and remove module from cavity and remove all connections from the rear of the stereo. Refer figure 14.

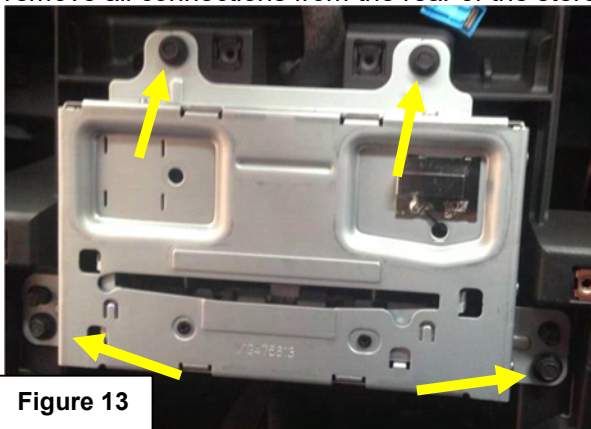


Figure 13



Figure 14