

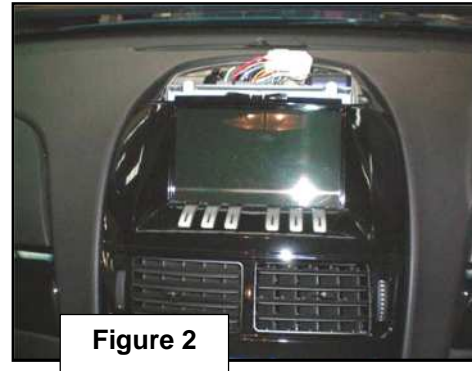
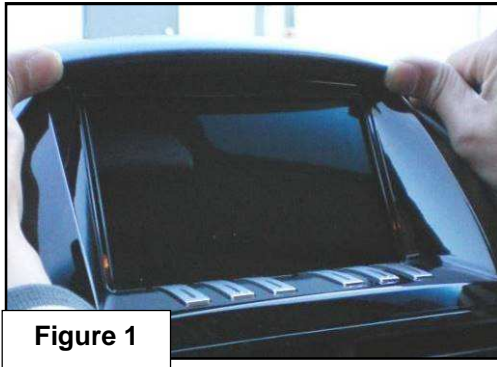


FORD FG ACM REMOVAL INSTRUCTIONS


1. Disconnect GND lead from Battery.
2. Use 2 hands and lift top panel of ICC from front first (take precaution when removing) and remove panel cover (Refer figure 1 & 2)

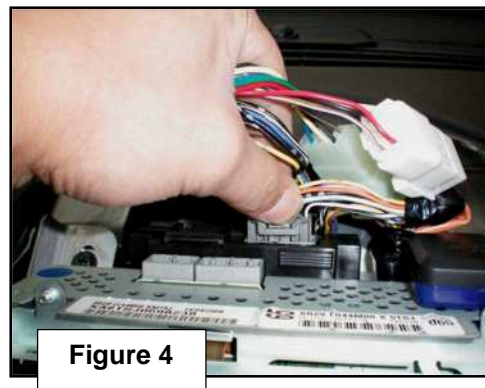



3. Remove 2 screws holding ICC brackets to dash (Refer figure 3).
4. Disconnect plugs from screen (Refer figure 4).

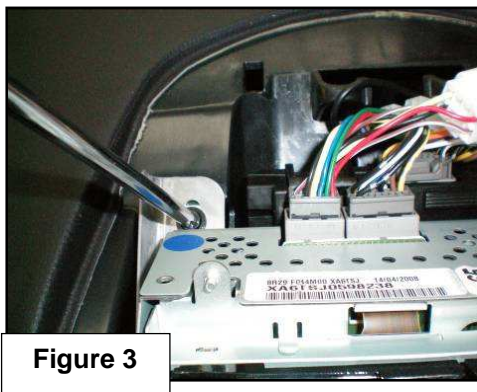

5. Remove tissue holder by pulling towards your body.
6. Remove 4 (8mm) bolts and disconnect antenna plug (Refer figure 5).
7. Pull out complete ICC from car.

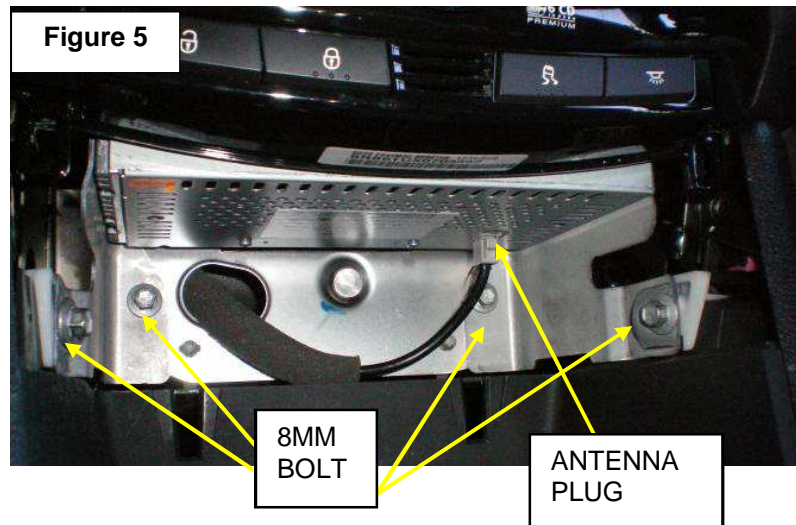

8. Remove 4 screws holding the TFT screen to the facia.

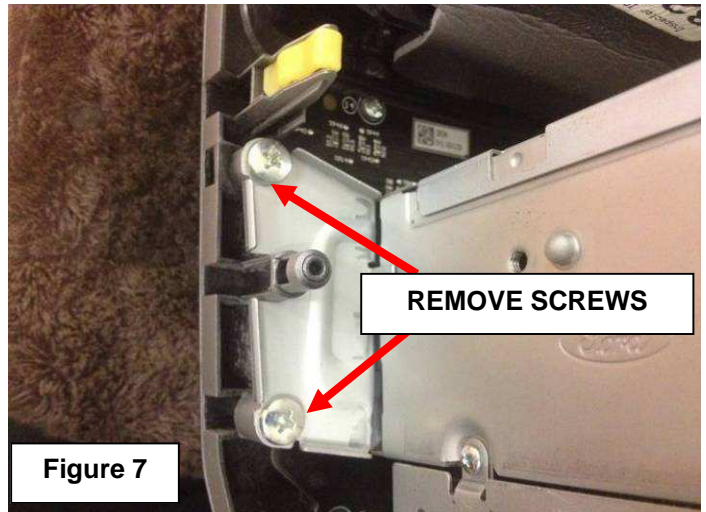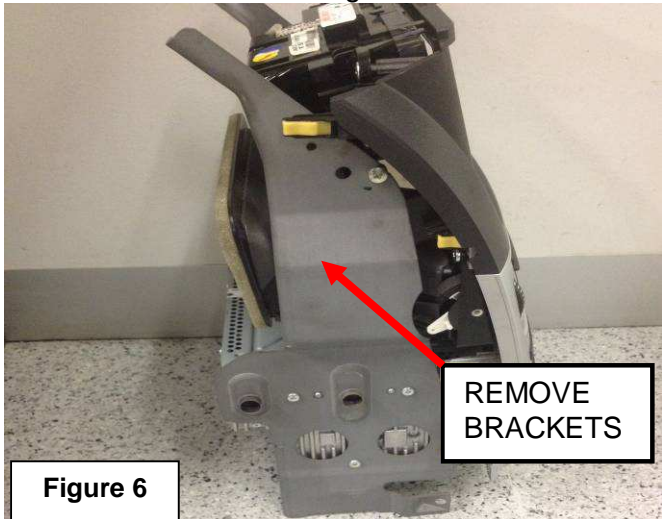

9. Remove the 2 x screws from either side of the audio module holding it in place and remove the cable tie attached to the top of the chassis holding the cable in place.

HOW TO IDENTIFY YOUR ACM



NOTE BEFORE SENDING:

- . PLEASE SUPPLY FULL NAME AND ADDRESS AND CONTACT DETAILS**
- . ONLY SEND THE AUDIO CONTROL MODULE - DO NOT SHIP THE COMPLETE ICC UNIT OTHERWISE EXTRA SHIPPING CHARGES WILL APPLY**

PLEASE SEND FAULTY ACM TO:

**ATT: SERVICE
ASL AUTOMEDIA
13 COMMERCIAL DRIVE
LYNBROOK VICTORIA 3975**