

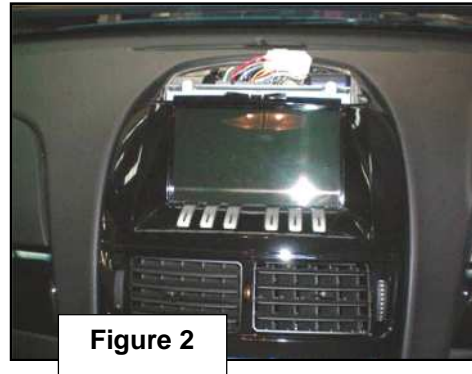
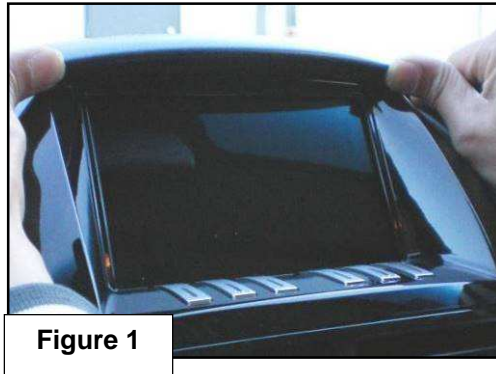


FORD FG REMOVAL INSTRUCTIONS

1. Disconnect GND lead from Battery.
2. Use 2 hands and lift top panel of ICC from front first (take precaution when removing) and remove panel cover (Refer figure 1 & 2)

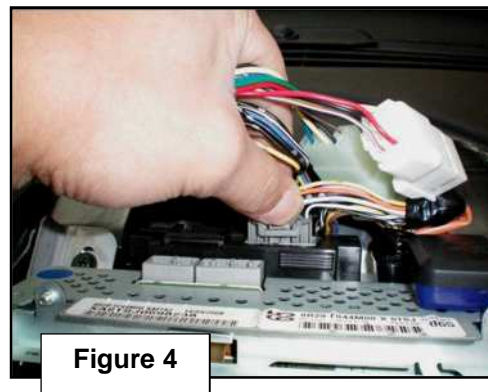

3. Remove 2 screws holding ICC brackets to dash (Refer figure 3).
4. Disconnect plugs from screen (Refer figure 4).

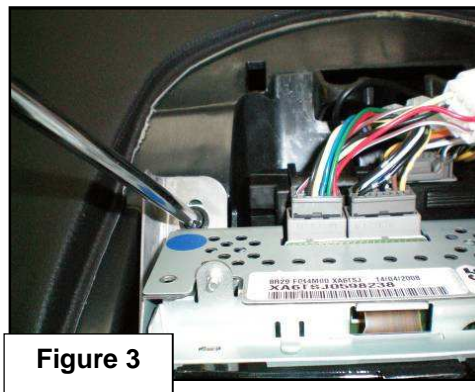

5. Remove tissue holder by pulling towards your body.
6. Remove 4 (8mm) bolts and disconnect antenna plug (Refer figure 5).
7. Pull out complete ICC from car.

