



PROCEDURE TO REMOVE BARRA ICC

1. Battery Disconnect GND lead from.
2. While being careful use a plastic removal tool and lift triangle panel from top of ICC (Refer figure 1 & 2).


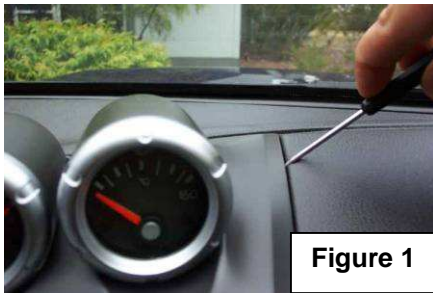


3. Using your hand pull up from the front the panel around the gear lever to remove. (Refer figure 3) If an automatic gear shift surround place in a suitable location.

4. With a Phillips screw driver, remove 2 x screws from under the Gear lever panel for the side wings. Figure 4 & 5.

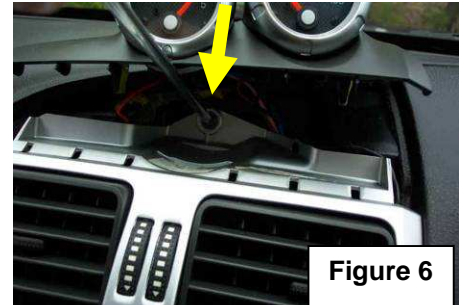

5. Also remove 1x screw from under the top panel. Refer figure 6.
6. Remove the side panels for center console as shown. Figure 7.

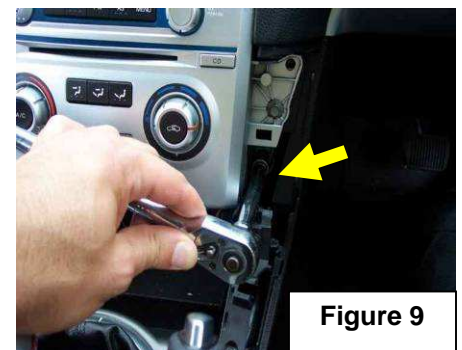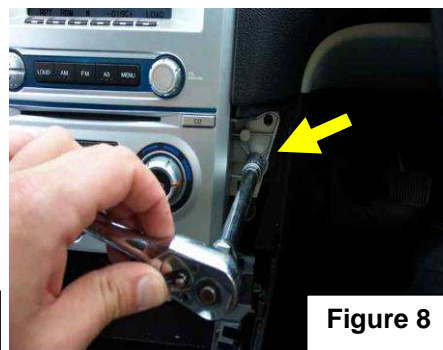

7. With a socket (8 mm) remove the 4x screws from side of ICC. 2x screws on each side. Figure 8 & 9.

8. Remove the tissues box from under the ICC in some cases there will be a screw in each side holding in the tissue box these will need to be removed first before trying to remove the tissue box. Figure 10 & 11.



9. After Once you removed the tissue box, there are 4 connectors underneath the ICC & an antenna plug which you have to unplug before pulling ICC out. Press clip on connector and then pull down for all connectors.
10. Now the ICC is ready to remove. Hold top of ICC and bottom and pull out from dash.