
## **VE SERIES 2 IQ NAVIGATION MODULE REMOVAL**

1. With IQ AHU Unit removed from vehicle remove the 3 screws holding the bottom chassis in place and using tweezers or similar remove bottom chassis. Figure 1

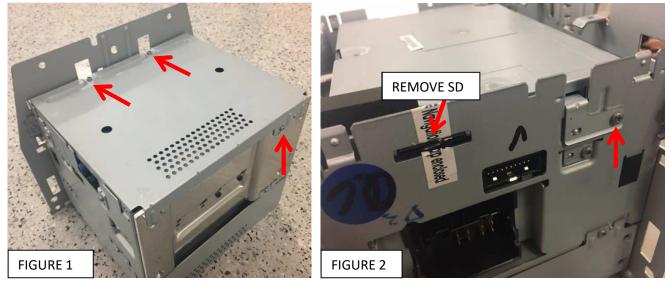

- 2. Remove SD Card and remove single screw. Figure 2
- 3. On other side remove the 2 x screws. Figure 3



- **4.** Your navigation module can now be removed from Audio Head Unit and reinstalled into your ASL supplied exchange unit (AHU4A & AHU5A AHU units only).
- **5.** If only the Navigation module has been supplied as an exchange, please return the faulty Navigation module to ASL.