



# VE SERIES 2 IQ AHU REMOVAL GUIDE



1. Remove Panel by starting at the bottom (**PULL TOWARDS DRIVERS SEAT-HORIZONTALLY**) and unclip a total of 8 clips. Disconnect any wiring and remove panel. Refer Figure 1

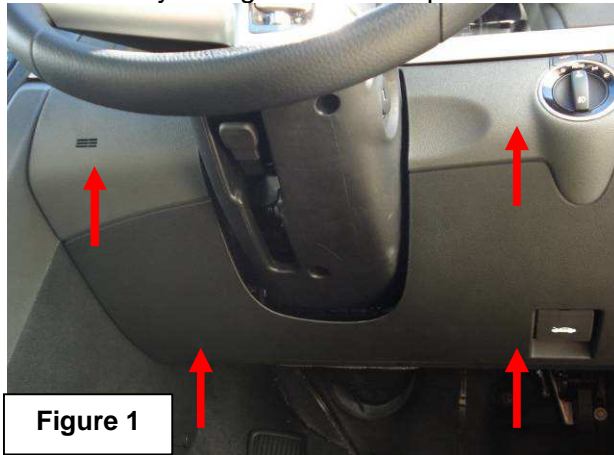


2. Remove Lock Clip by removing center lock pin and removing clip and pull right hand center console lower panel down (This will unclip). Refer Figure 2 and 3.

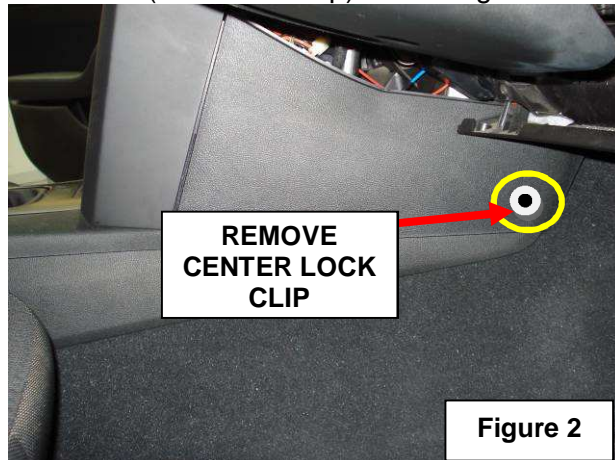

3. Pull Upper Panel out by grasping at the two points and unclipping. Refer figure 4 & 5

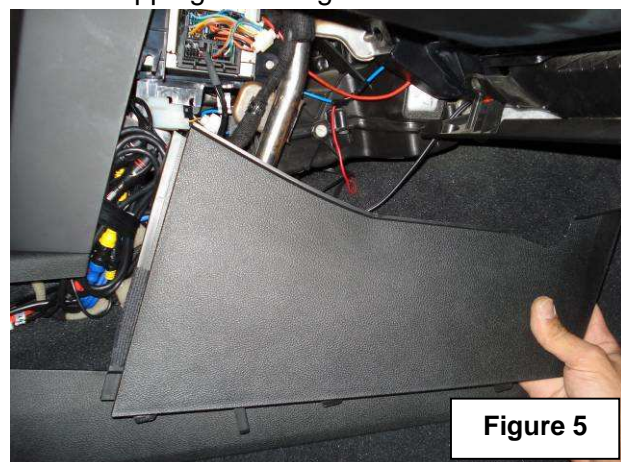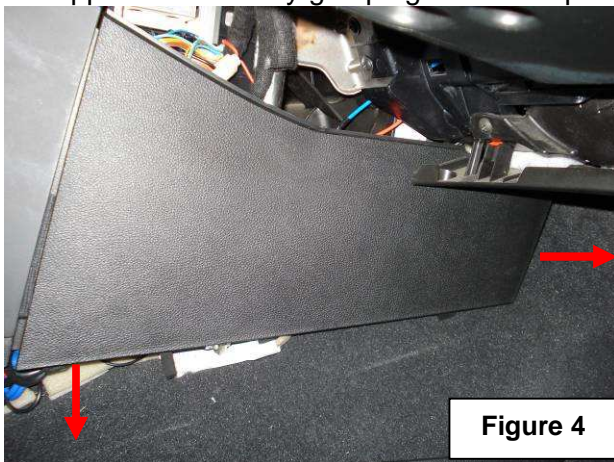



4. Disconnect the 'Main Stereo Harness' and 'Video Input Connector' (Refer figure 6).

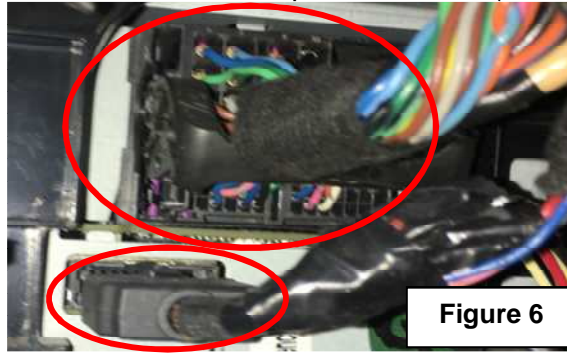

5. Remove trim panel from above glove box and above drivers side steering wheel. Also remove left side plastic cover. Refer figure 7 & 8.



6. Remove the 2 plastic covers concealing the screws as follows. Refer figure 9 – 11.

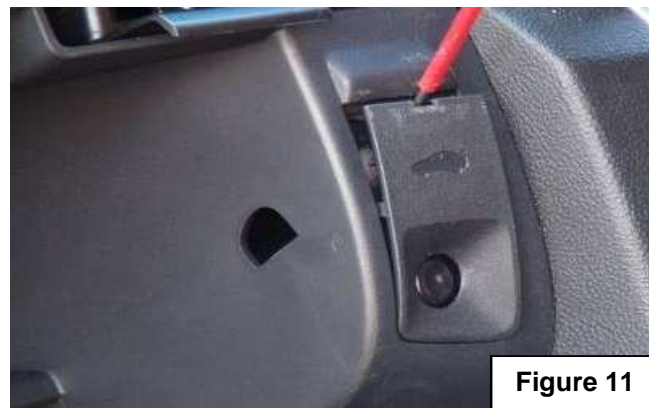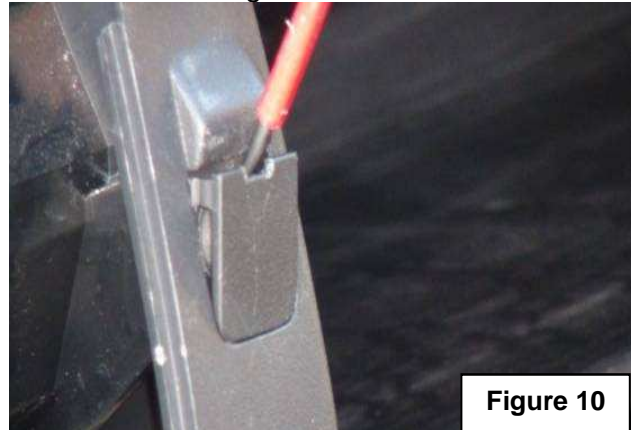

7. Remove 2 x lock clip and remove the insulation panel under the glove box by grasping at rear and pulling down and then at the front. Undo the 2 x screws in from the bottom of the glove compartment. Refer figure 12 & 13.



Figure 12



Figure 13

8. Undo the 5 x glove box screws and grasp and remove the glove box. Refer figure 14 & 15.

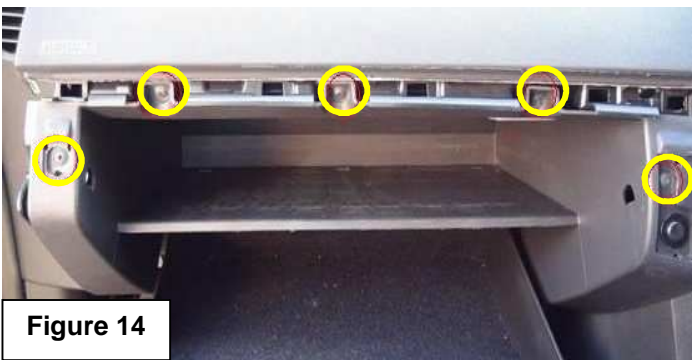


Figure 14



Figure 15

9. Remove the grey USB input plug, the WHITE antenna plug and if Navigation fitted remove the BLUE and WHITE plugs. Refer figure 16 & 17

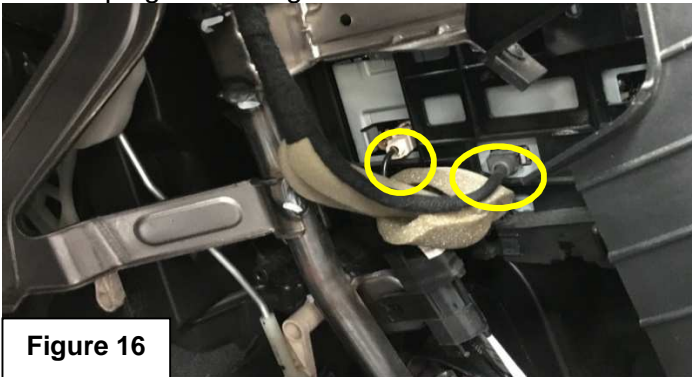


Figure 16



Figure 17

10. Using a removal tool start at the front of the Gear Shift Panel and lift up and clip out moving towards the drink holder and remove the plugs from front the Panel. Refer figure 18 & 19.



Figure 18



Figure 19

11. Undo the 4 x screws holding down the gear shift surround and remove the 4 screws. Refer figure 20 & 21.



Figure 20



Figure 21

12. Pull lower stereo surround out. Undo 2 x screws holding top fascia. Refer figure Refer figure 22 & 23.

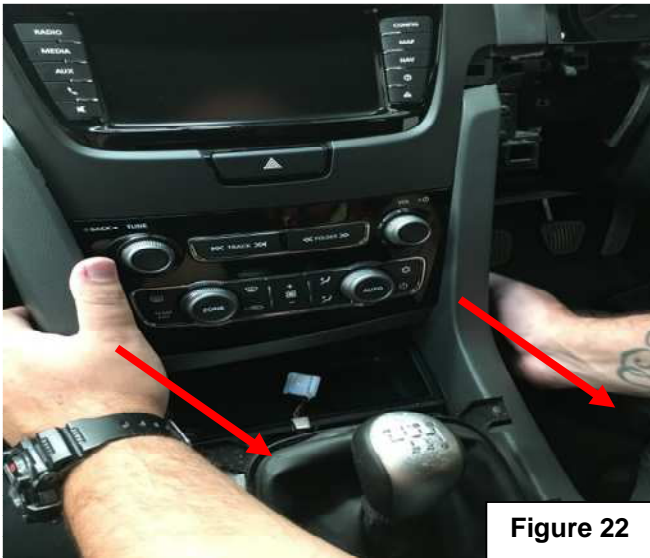


Figure 22



Figure 23

13. Locate the top speaker grill and from the rear (towards the windscreen) remove the grill (this can be quite tricky as you need to get under the grill and lift up). Remove the 2 x screws. Refer figure 24 & 25.

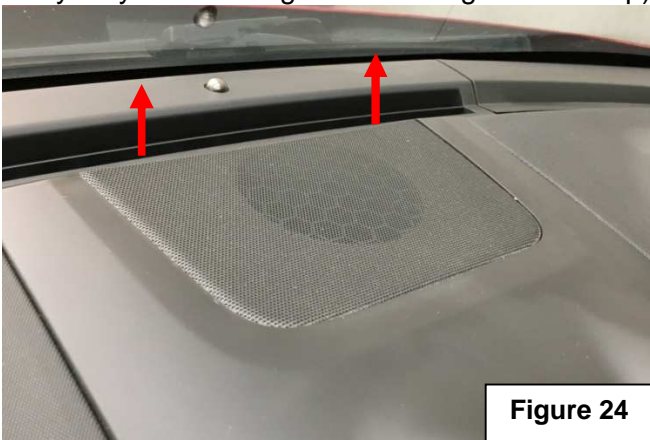


Figure 24

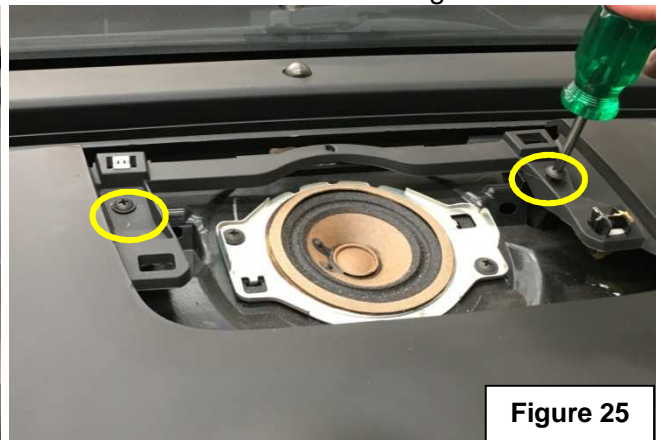


Figure 25

14. Once the screws have been removed lift up clip up either side of the top of the upper facia to release the clips.



Figure 26



Figure 27

15. Grasp the facia from the top and bottom and pullout. Remove 4 screws holding in the Audio Head Unit and remove AHU.



Figure 28

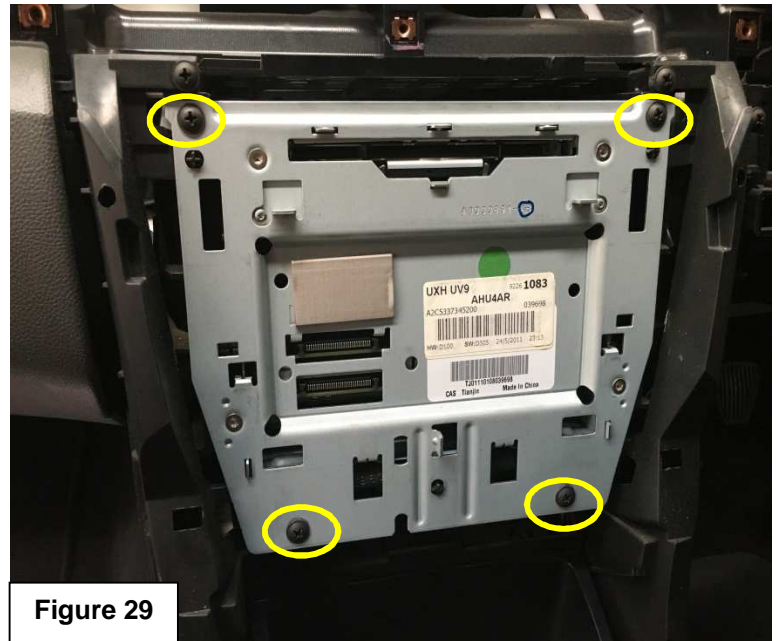


Figure 29

16. To find your model number for IQ system exchange, please advise us the details of the Model number and Hardware level on the front of the AHU. We can provide you with an exchange unit updated to the latest level and provide you with any features that your IQ system currently has. These details and options can be selected before checkout.

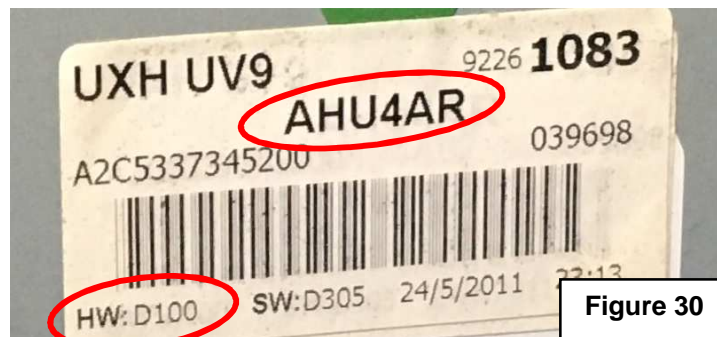


Figure 30