

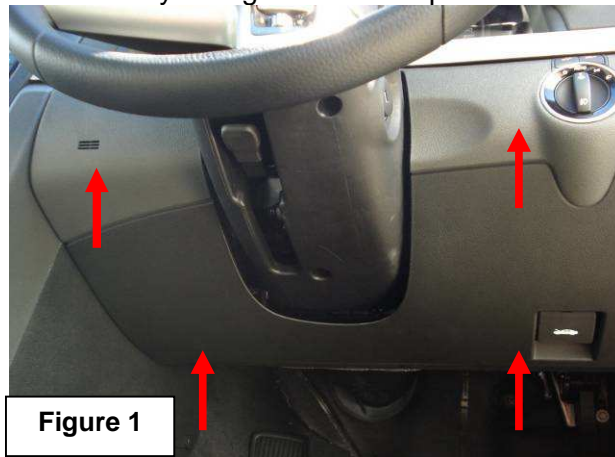


VE SERIES 1 STEREO REMOVAL GUIDE


1. Remove Panel by starting at the bottom (**PULL TOWARDS DRIVERS SEAT-HORIZONTALLY**) and unclip a total of 8 clips. Disconnect any wiring and remove panel. Refer Figure 1

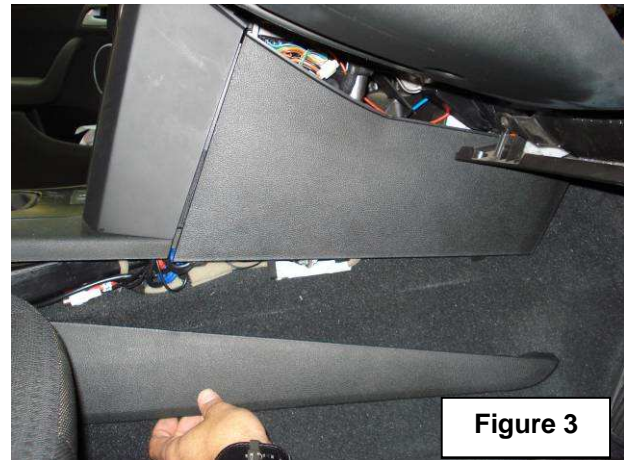



2. Remove Lock Clip by removing center lock pin and removing clip and pull right hand center console lower panel down (This will unclip). Refer Figure 2 and 3.

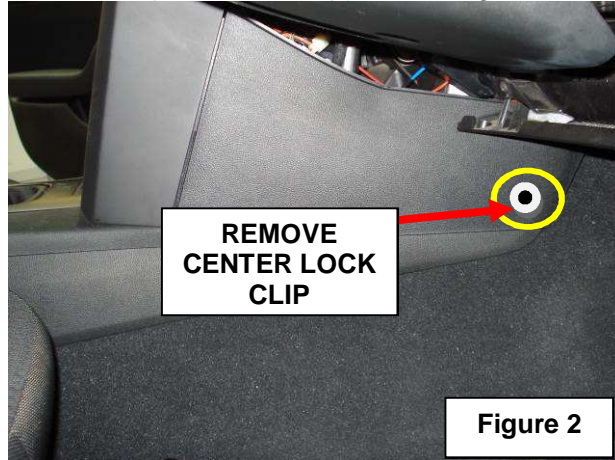


3. Pull Upper Panel out by grasping at the two points and unclipping. Refer figure 4 & 5

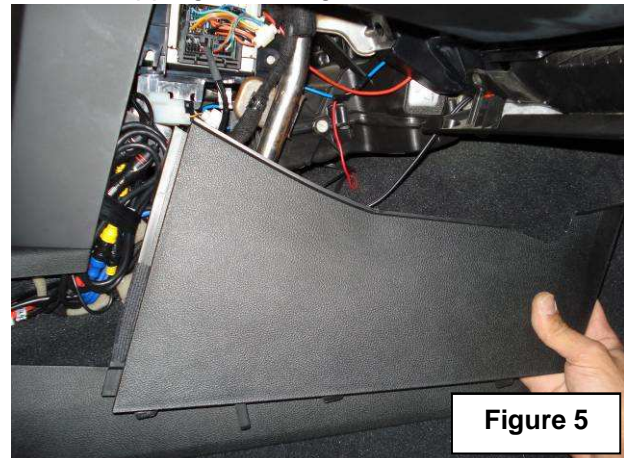


4. Disconnect the 'Main Stereo Harness' and 'Video Input Connector' (Refer figure 6).

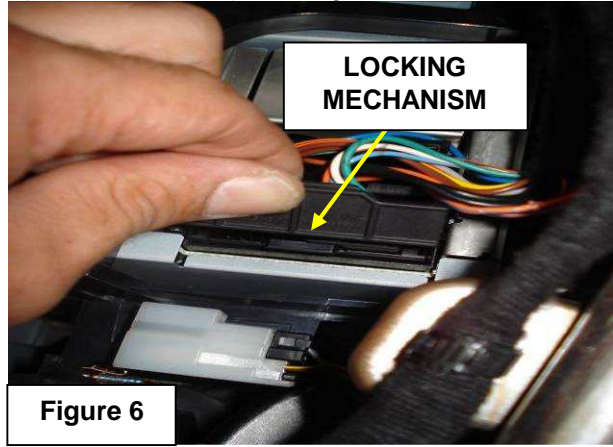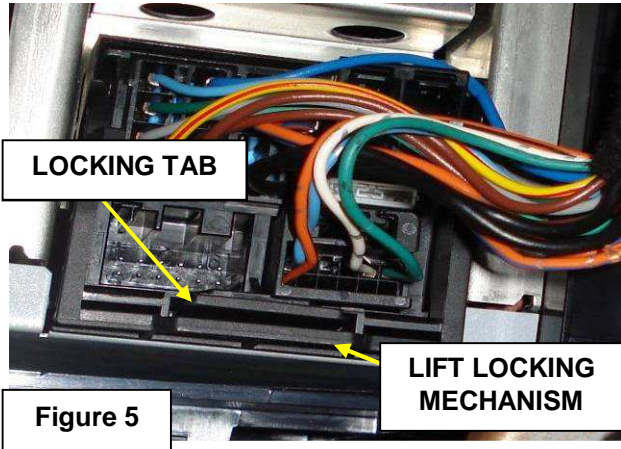


5. If present unlock the video input harness above the main stereo harness. Refer figure 7. To the left of the glove compartment remove the side plastic cover. Refer figure 8.

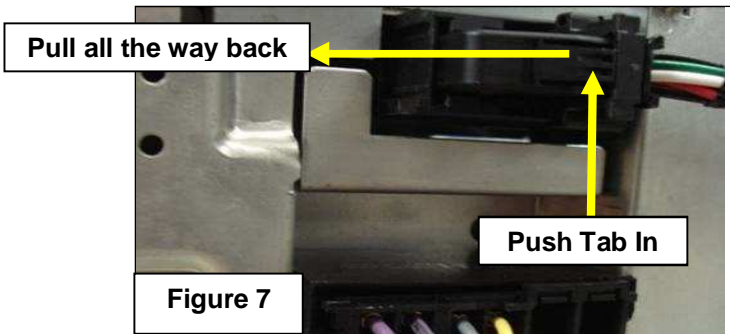


6. Remove the 2 plastic covers concealing the screws as follows. Refer figure 9, 10 & 11.

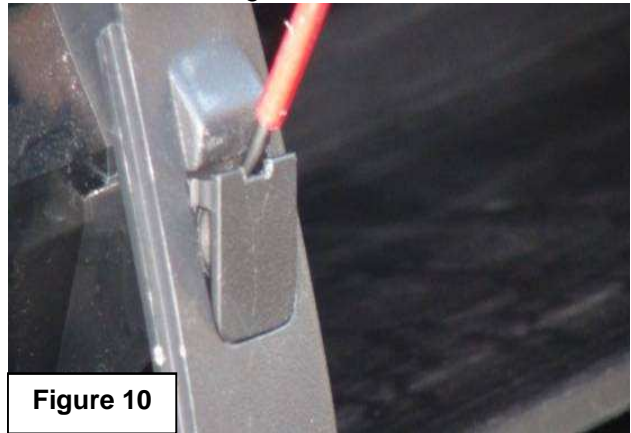


7. Remove the insulation panel under the glove box by grasping at rear and pulling down and then at the front. Undo the 2 x screws in from the bottom of the glove compartment. Refer figure 12 & 13..

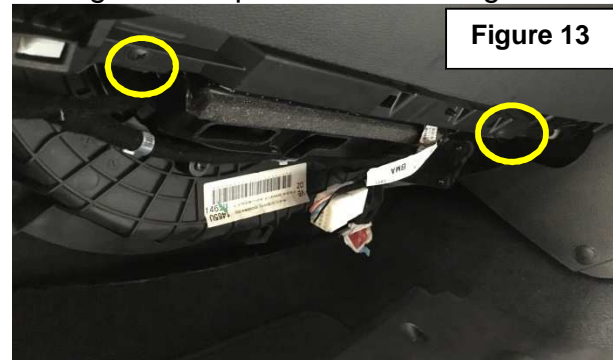

8. Undo the 5 x glove box screws and grasp and remove the glove box. Refer figure 14 & 15.

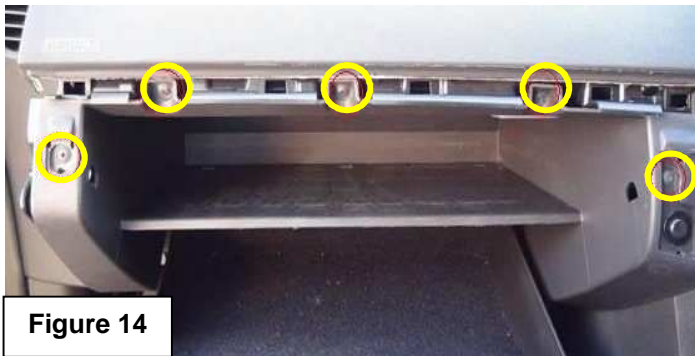

9. Remove the WHITE antenna plug and ORANGE plug (IF PRESENT). There is a little tab on each of the plugs at the top that needs to be pressed down to remove. (refer figure 16 & 17)

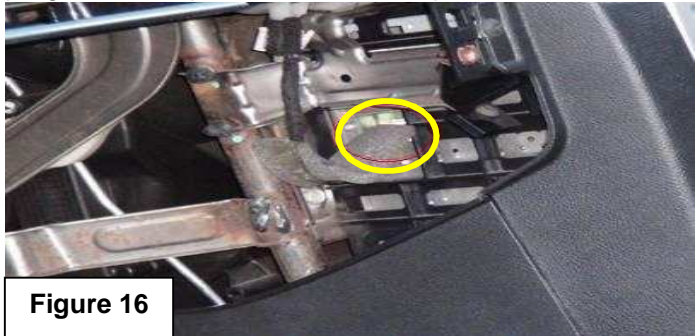

10. Facia must be removed from stereo to access the 4 screws holding in the AHU. This is achieved by pulling the facia out at the following points. Grasp from behind and pull towards rear of vehicle. Refer figure 18.



11. After facia is removed undo the 4 screws at the following positions and remove the AHU. Refer figure 19.



Figure 19

12. The model number of your AHU is displayed on the front sticker. Refer figure 20.



Figure 20

VE IRC

7 648 791 520

Made in Malaysia